


RNVS INSTALLATION

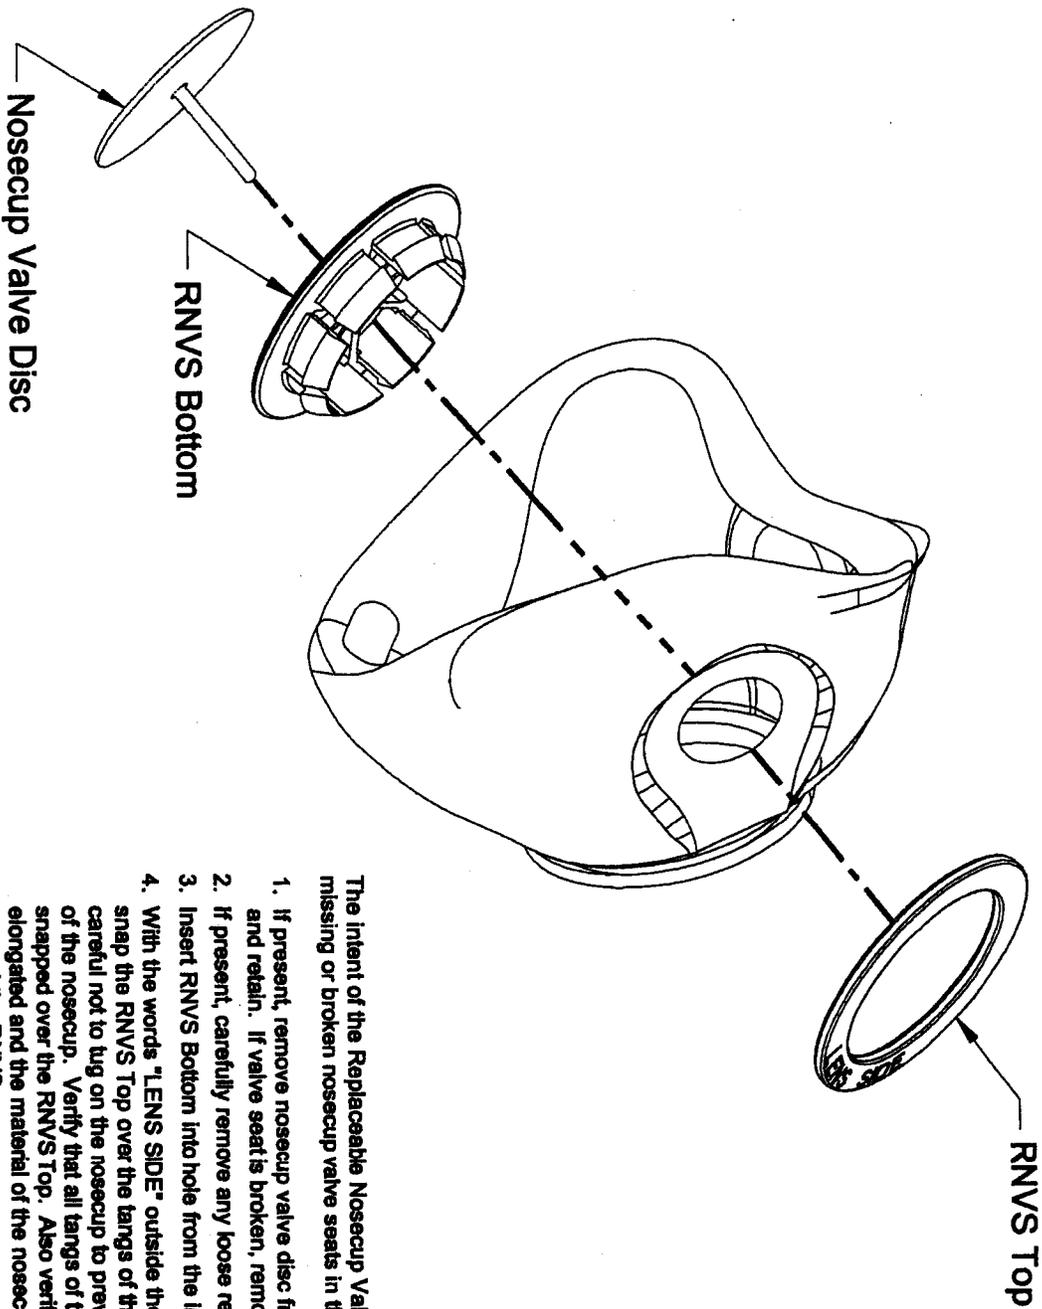

The intent of the Replaceable Nosecup Valve Seat is to replace missing or broken nosecup valve seats in the M40/42 Series Masks.

1. If present, remove nosecup valve disc from nosecup valve seat and retain. If valve seat is broken, remove and discard.
2. If present, carefully remove any loose residual adhesive by hand.
3. Insert RNVS Bottom into hole from the inside of the nosecup.
4. With the words "LENS SIDE" outside the nosecup, facing the lens, snap the RNVS Top over the tangs of the seat from the outside. Be careful not to tug on the nosecup to prevent elongation of the hole of the nosecup. Verify that all tangs of the RNVS Bottom have snapped over the RNVS Top. Also verify the hole has not been elongated and the material of the nosecup is sandwiched all the way around the RNVS.
5. Inspect nosecup valve disc for tears, nicks, cuts, etc., and if not damaged, then reinstall into RNVS. Otherwise, replace with new disc.

DWG. No. 5-1-2747